



User Manual


A4 PORTABLE HEAT TRANSFER PRINTER

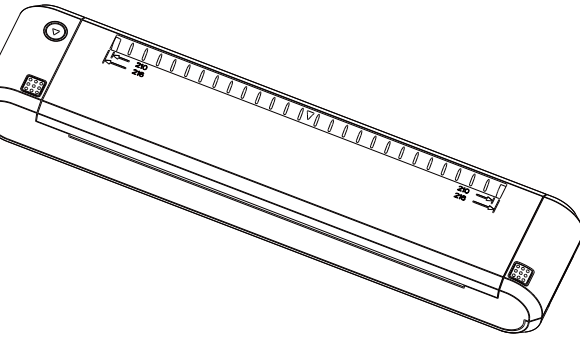


1.Packing Instruction

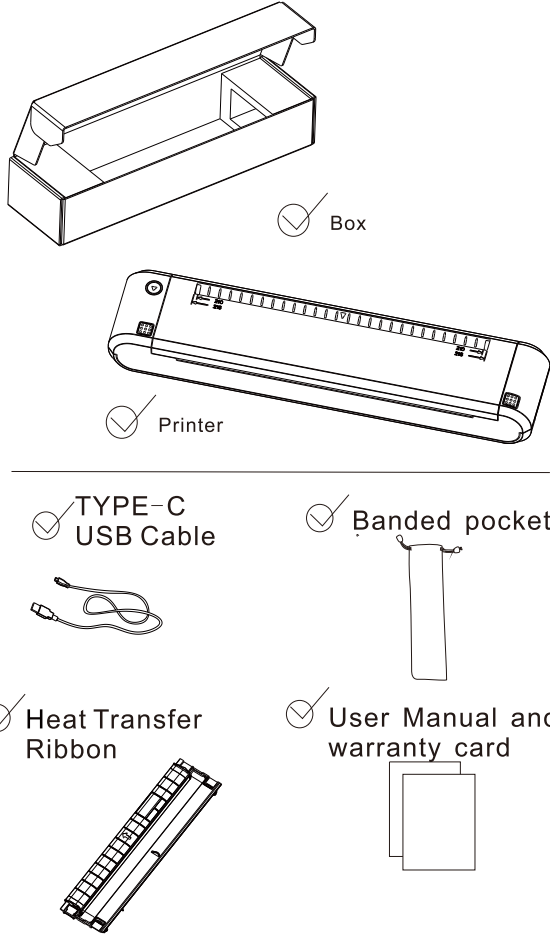


2.Operating Instructions

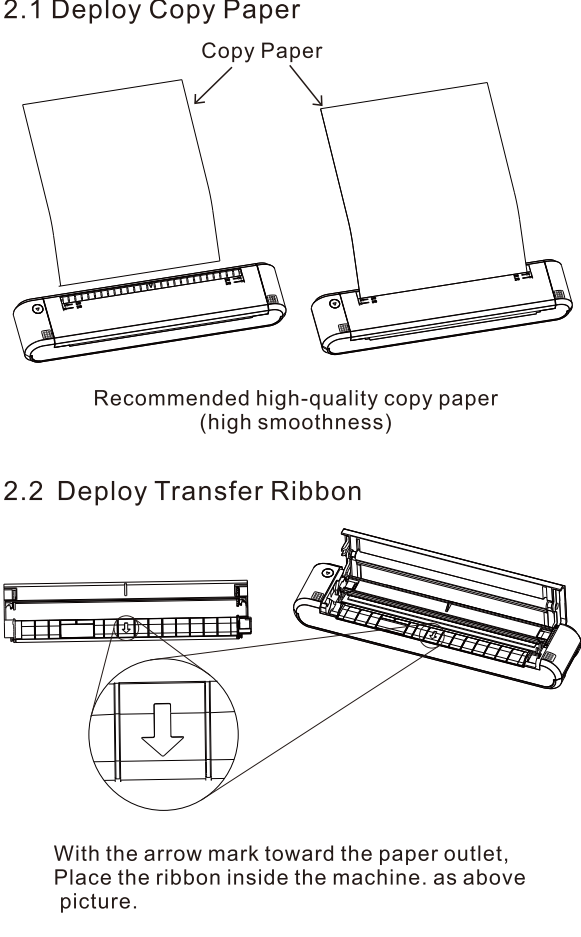




2.3 Exception Handling

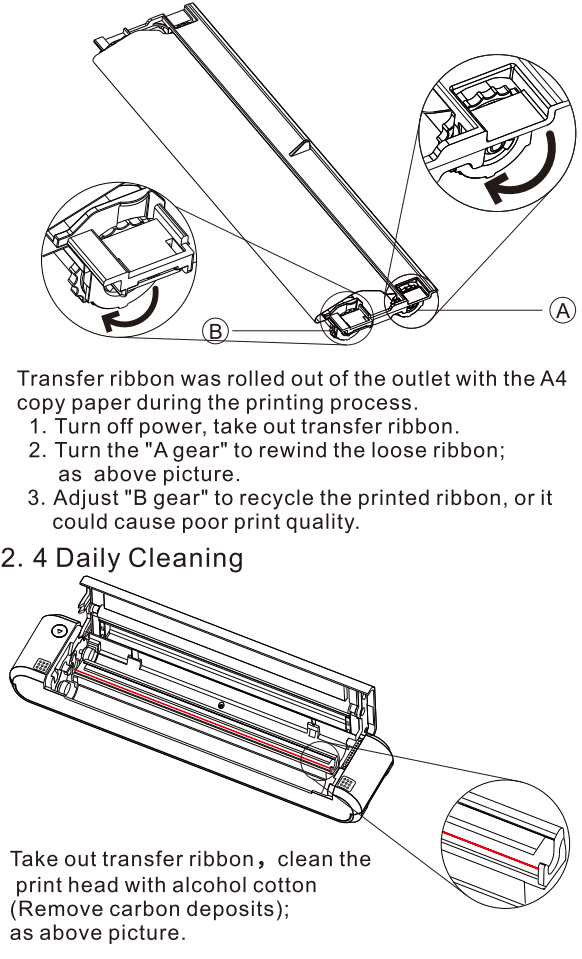



3.Key Functions

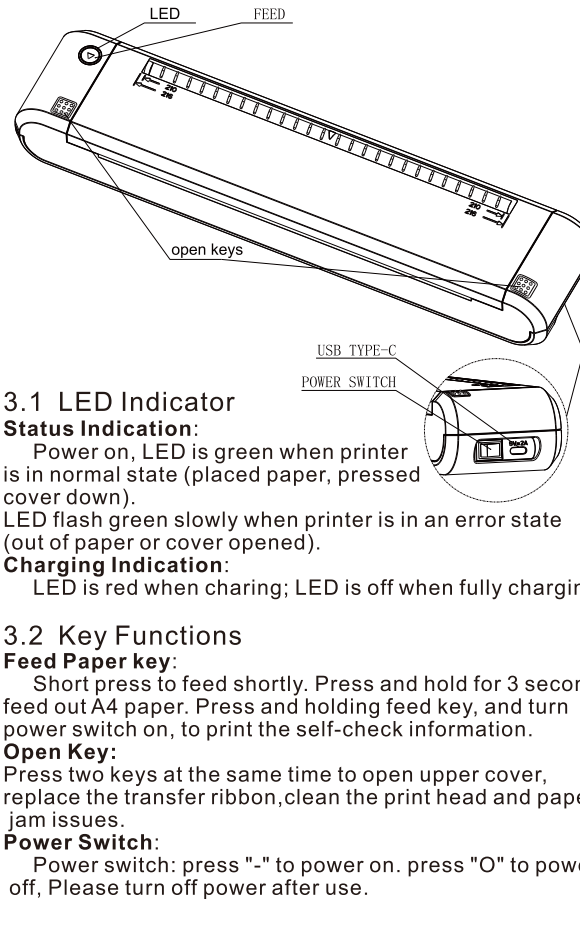

4.APP print

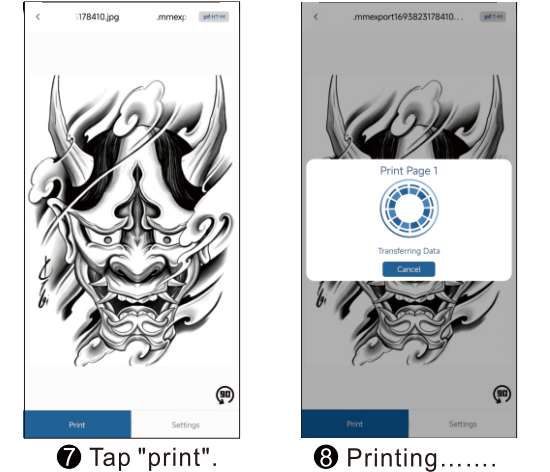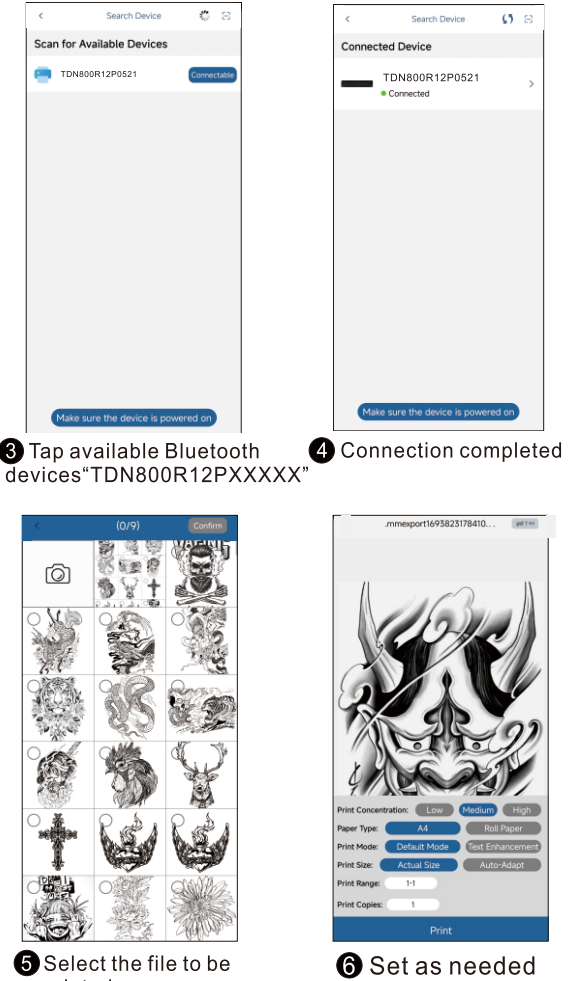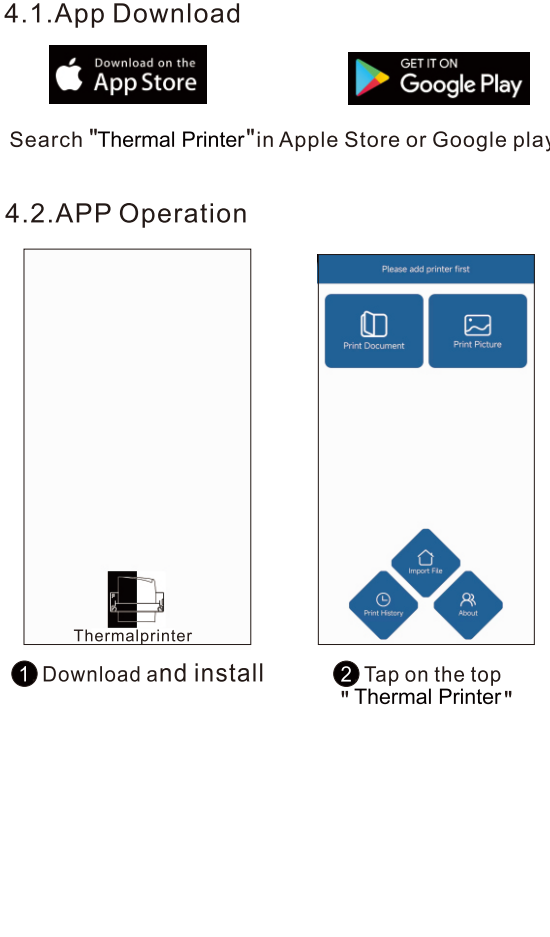

5.PC Print(Windows7/8/10)

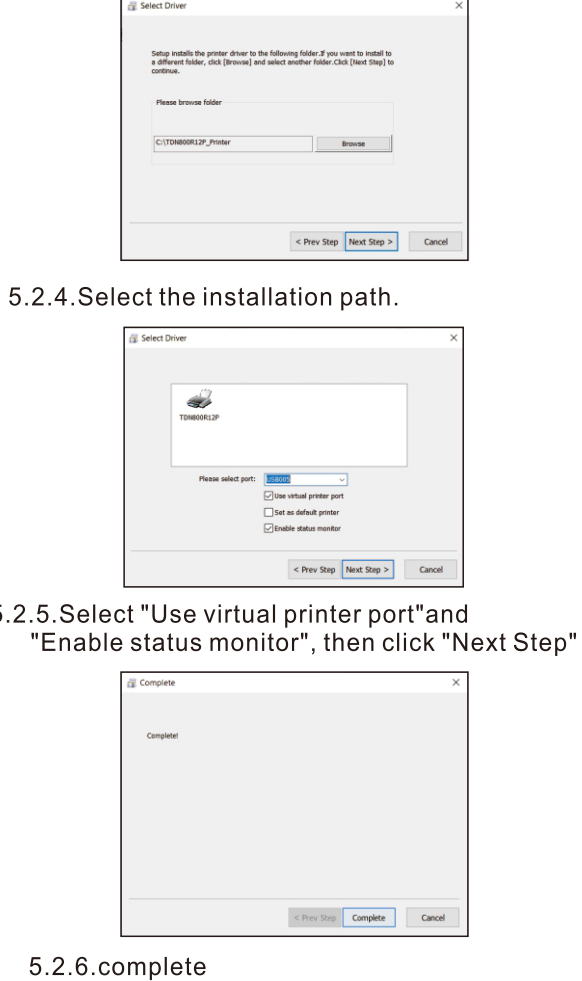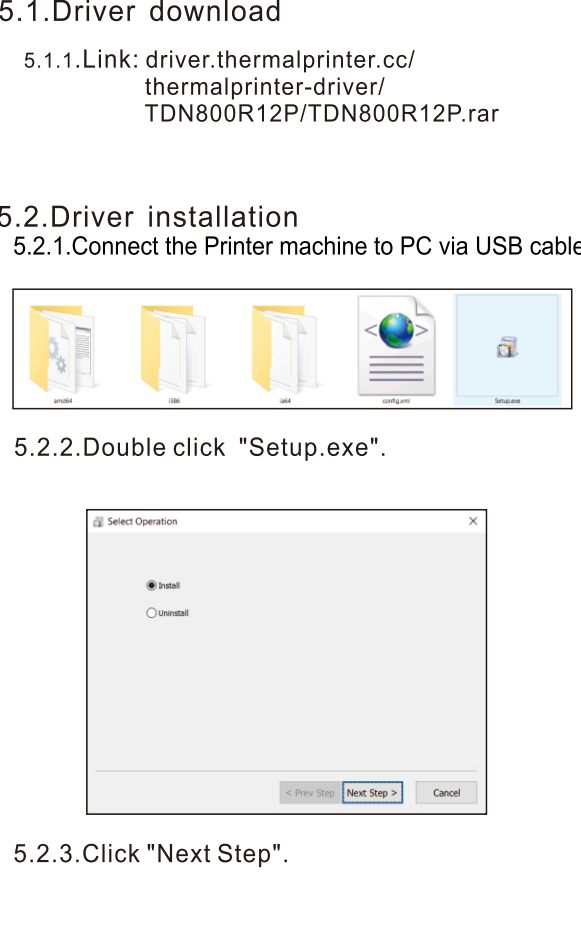

Announcements

If there is smoke, abnormal smell, or abnormal noise, turn off the power immediately. Continued use may cause fire. You should unplug it immediately and contact the seller for advice. Do not attempt to repair the machine by yourself to avoid other faults. Do not disassemble or correct by yourself. Avoid damage to the machine or cause fire. Do not use a power supply that is not configured by the producers to avoid faults. Prevent foreign matter from falling into the machine, so as not to cause fire. If liquid flow into the machine, unplug it immediately, and contact the seller to find a solution, continued use may cause fire. Do not use cables that are not configured by the company. Different connection methods may damage the machine. Place the machine on a firm, stable platform to avoid falling damage. Do not use the machine in damp and dusty places. pay attention to moisture proof. Please turn off the power when not in use for a long time.

The warranty and maintenance

The company guarantees that the product can play its superior performance under normal use and maintenance, and the company also provides a one-year warranty service. **maintenance** The maintenance of this product should be carried out by professionals with certain maintenance experience. Please do not change components without authorization during maintenance, Damage to drive board caused by unauthorized maintenance is not within the scope of warranty. **Warranty** Warranty period: the customers buy the machine from the company, have warranty period of one year calculated from the date of shipment. During the warranty period, the following conditions will not enjoy free service. A.The driver board is damaged due to improper operation. B.Damage caused by customer's own maintenance and transformation. C.Damage caused by non-compliance with machine operating conditions. D.Damage caused by natural disasters.

Certificate of approval

product model Numbers: _____
 The date of production: _____
 inspector: _____

Product warranty card

User name: _____
 Purchase date: _____
 Address: _____
 Postal code / ZIP code: _____